













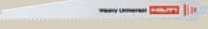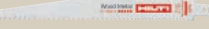


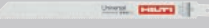






Guida alla lame per seghetto frontale

	Demolizione	Metallo 5–20 mm	Metallo 3–10 mm	Metallo 20–60 mm	Ghisa	Acciaio inossidabile	Metalli non ferrosi	Plastica	Legno con chiodi	Legno	Pannello in gessofibra	Muratura
Ultimate +		 SPX-C Metal #2374140			 SPX-C Metal #2374140	 SPX-C Metal #2374140						
Ultimate	 SPX Univ #2140379	 SPX Metal #2262675						 SPX Univ #2140379	 SPX W/M #2262673		 SPX Plaster #284554	 SPX Brick #2165377  SPX Concrete #369054
Premium	 SP Univ #2267011	 SP Metal #2179719	 SP Metal #2179721	 SP Metal #2179716				 SP Metal #2179721	 SP Univ #2267011	 SPX W/M #2222129	 SP Wood #2222136	 SPX W/M #2222129
Standard	 P Univ #2222119		 P Metal #2099350	 P Metal #2099353				 P Metal #2099350	 P Univ #2222119			

Che cosa significano le etichette?

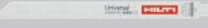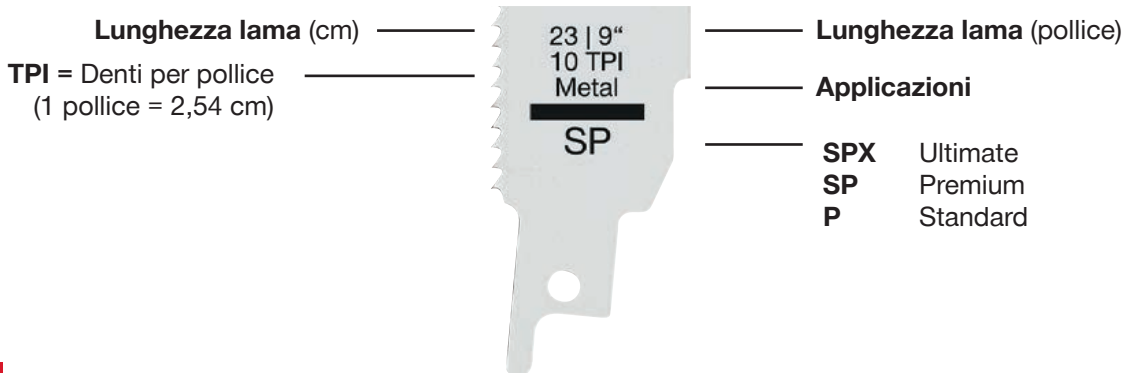

Come decidere la lunghezza?

Seguire la regola di base:
Larghezza del materiale di base + 50 mm = Lunghezza lama

Esempio:
140 mm di larghezza + 50 mm = 190 mm
-> lunghezza consigliata della lama 200 mm o 230 mm

